

Spiroscape



Quick guide - Cylinder filling




INTERSPIRO

Keeps You Breathing

Do step 1-6 for regular filling.

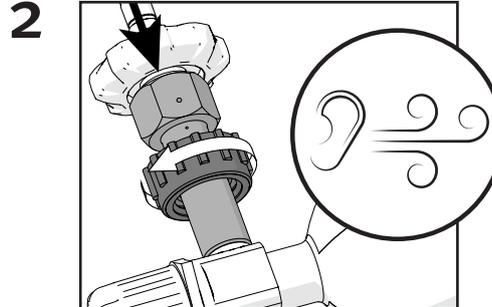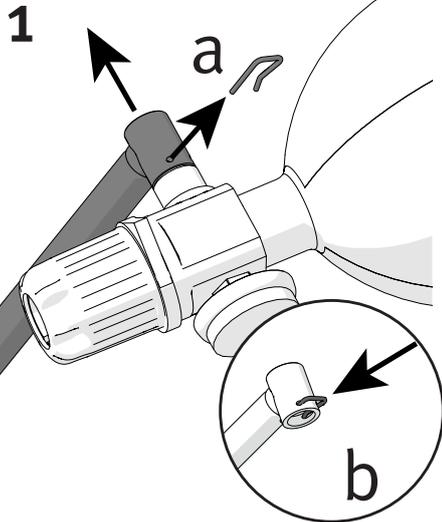


- Assemble the filling adapter to the filling hose.
- Pressurize the filling hose.
- Tighten the auto-fill adapter to the connection until air flow can be heard.

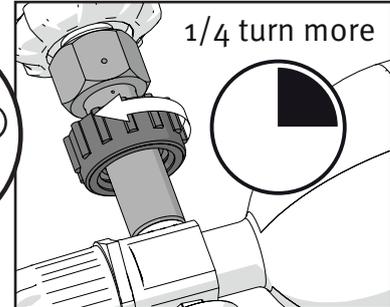


- Then only tighten 1/4 turn more.




- Fill the cylinder.

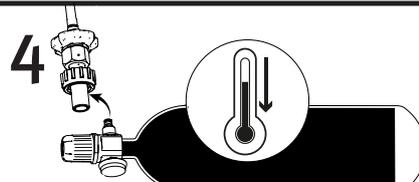

- Remove the adapter and let the cylinder cool down.

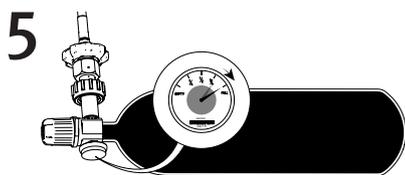


- Reassemble the adapter and fill the cylinder again until full.

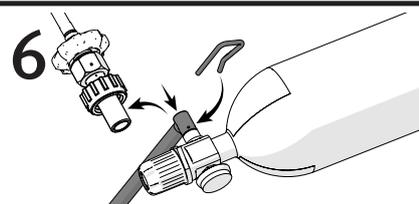

- Remove the adapter.
- Reassemble the hose.

Do step 7-10 if the cylinder has been stored without air.

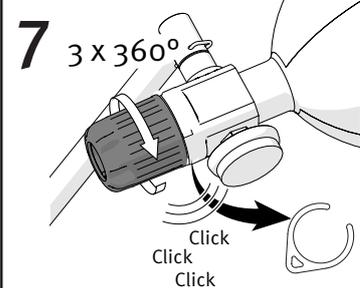


- Remove the quickstart ring.
- Turn the hand wheel 3 turns, listen for a click at each turn.
- Assemble the quickstart ring.



- Wait one hour before proceeding.

- Remove the hood from the breathing hose.
- Lower the hose nipple just a little into water and check for bubbles during 1 minute.
- **Make sure that no water enters the hose.**
- Dry the hose nipple and reassemble the hood.

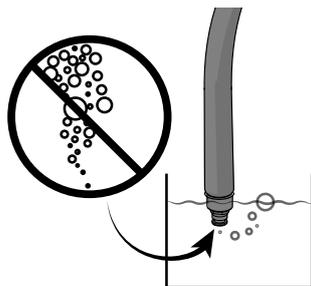

No bubbles = OK!


Bubbles = Test failed!

Step 9-10 only has to be done if the test failed.




- Store the cylinder for 24 hours in room temperature.

10

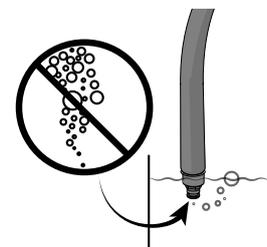

- Make sure that the cylinder has full pressure.
- Repeat the test according to step 8.
- If the test fails the unit must be taken out of service

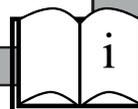

For further information see user manual 95542.