

## Safety bulletin S-mask with breathing valve

30217A01

LIDINGÖ 20.10.2008

### INFORMATION

Important information about connecting and locking the breathing valve to the S-mask

### REFERS TO

QS S-FACE MASK

### DESCRIPTION

If the breathing valve on the QS S-FACE MASK is installed incorrectly, the locking mechanism for the breathing valve does not engage, which in turn can result in the breathing valve coming loose.


### ACTIONS

The User Manual for the QS S-FACE MASK (96408B91), section 4 describes how to install the valve correctly.


#### 4 CONNECT THE BREATHING VALVE

1. Insert the breathing valve into the face mask [Picture 6] and move the external speech cone down to lock the breathing valve in position. In the correct position the lower lip of the speech cone covers the serial number on the breathing valve.

Tighten the hand screw [Picture 7].

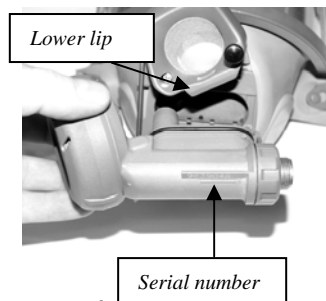


Picture 6

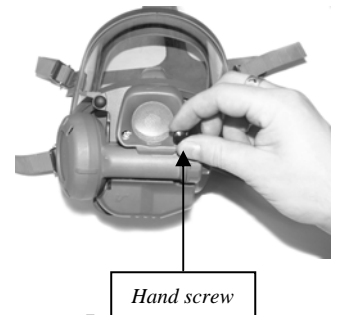

Picture 7

When connecting the breathing valve, it is important that the valve is pressed into position. It should be easy to turn the outer speech cone down to its locking position. The lip of the outer speech cone should cover the serial number on the breathing valve.

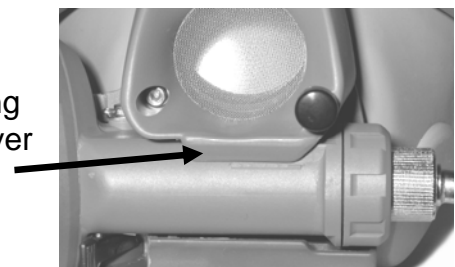

Correct locking